

McCue Bumper Removal Procedure

Mike Hayes, 10/18/12

page 1 of 2



Developed by Brian Schooley, Lead Man, Bumpers

Bumper and End Cap



1-Press Bumper to spread it apart.



2-Insert small flat screwdriver 1".



3-Rotate screwdriver 90 degrees and pry up.



4-Lift up one edge of Bumper.




5-Slide screwdriver down length of Bumper.



6-Insert screwdriver as far as possible (over internal Base).



7-Pound screwdriver with hand or hammer to disengage opposite side of Bumper.

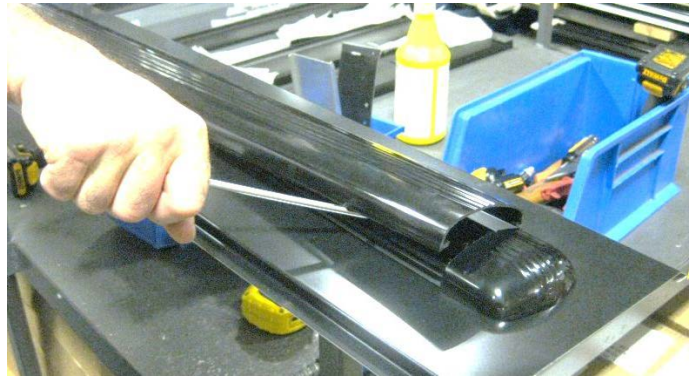

8-Slide screwdriver down entire length of bumper.

Questions? Contact Zero Zone Service Department 800-247-4496

Also see our website www.Zero-Zone.com go to Service, Documentation and Support