

MIRROR INSTALLATION INSTRUCTIONS

Instructions for installing a mirror on a Zero Zone Reveal Merchandiser®. These instructions can be used for multiple mirror sizes.

KIT INCLUDES: MIRROR, SUPPORT, BRACKET, AIR DEFLECTOR, SCREWS

Part Number	Description	Quantity
34-0117-X	Mirror (36" wide or 48" wide)	1
50-0820-XX	Mirror Support Bracket	3 or 4
50-0821-XX	Mirror Support	1
50-0822-XX	Air Deflector ("Mirror Scoop")	1
64-0207	Hex Screws	3 or 4

1. Assemble the support brackets (50-0820) to the mirror support (50-0821). Slide the tabs on the brackets into the slots in the mirror support. Use the supplied hex screws (64-0207) to fasten the brackets in place (See Figure 1 and Figure 2). *Note: There will be 3 brackets and 3 screws for 36" wide mirrors or 4 brackets and 4 screws for 48" wide mirrors.*

FIGURE 1: Support Brackets and Mirror Support



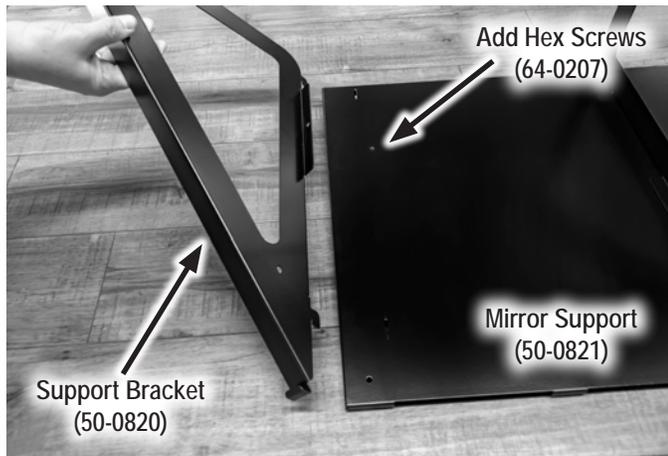


FIGURE 2: Bracket Tabs Inserted into Support Slots

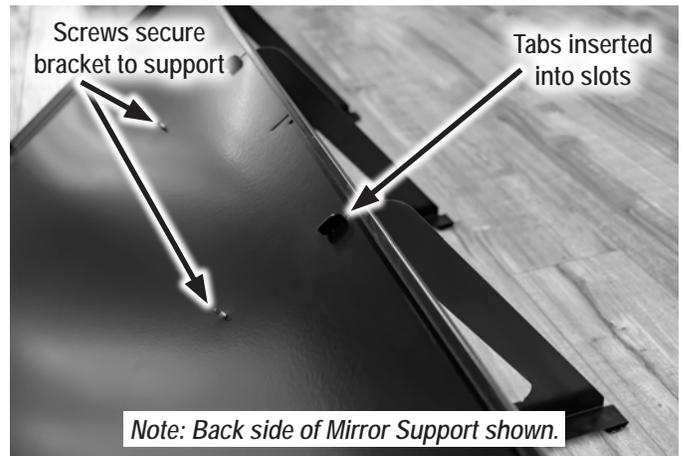

2. Install the mirror support into the shelf standards, using both the second and third slots from the top (See Figure 3).

FIGURE 3: Install Mirror Support into the Shelf Standards

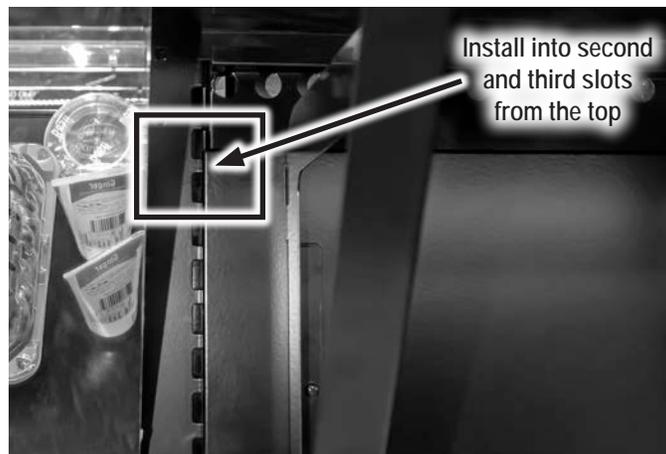

MIRROR INSTALLATION INSTRUCTIONS

3. Install the air deflector (also called a "mirror scoop") into the shelf standards under the mirror support (See Figure 4). Refer to the table for the correct slot, counting down from the top.
4. Peel the protective coating off of the mirror (34-0117). Hang the mirror from the brackets. Start by inserting it into the top and then the bottom (See Figure 5).
5. Center the mirror for optimal product display (See Figure 6).

Mirror Height	Slot for Air Deflector
8" Tall	6th Slot from Top
12" Tall	9th Slot from Top
20" Tall	16th Slot from Top
24" Tall	19th Slot from Top

FIGURE 4: Install Air Deflector Under Mirror Support

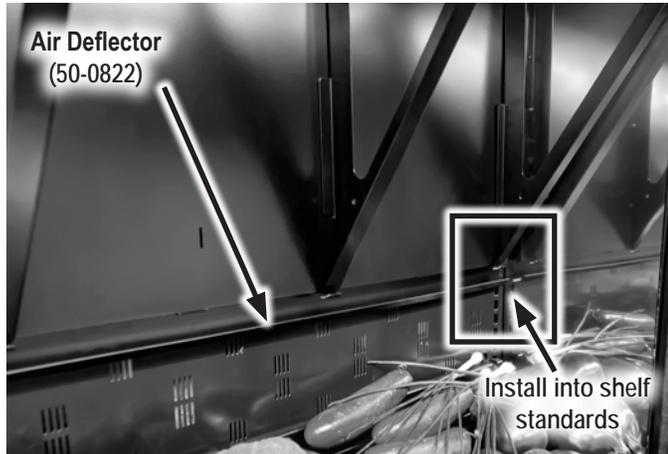


FIGURE 5: Hang the Mirror, Insert Top First



FIGURE 6: Mirror Installed and Centered

