

REVEAL

merchandise[®]



ZERO ZONE

REVEAL MERCHANDISER[®] MULTI-DECKS WITH DOORS

With CoolView[®] Ultra[™] Doors & ChillBrite[®] LED Lighting

INSTALLATION & OPERATION MANUAL



66-0109 REV L • SEP 2026



Table Of Contents

ZERO ZONE WARRANTY	1
■ Limited Warranty	1
■ Warranty Claims	1
■ What is not covered under this warranty	1
INTRODUCTION	3
INSTALLATION & OPERATION	5
■ Delivery Inspection	5
■ Back-to-back Wood Plank Removal Instructions	5
■ Packaging	5
■ Location	6
■ Moving Cases	6
■ Optional Bases	6
■ Leveling	7
■ Lineup Assembly	9
■ Case Joint Caulking (Butyl*)	10
■ NSF Compliance Sealing (Silicone)	11
■ Reveal to Reveal with Doors Joint Instructions	12
■ Door Leveling (Door Sag/Sawtooth)	13
■ Bottom Mounting Plate	13
■ Top Mounting Plate	13
■ Drain	13
■ Kickplates	14
■ Bumper	14
■ Top Trim	14
■ CoolView® Doors	14
■ CoolArc™ Door Handles	14
■ Adjusting Door Closer/Power Cartridge Tension	15
■ Hold-Open Bracket	15
■ Door Gasket	15
■ Installing a Door	15
■ Removing a Door	16
■ Shelves & Stocking Product	16
REFRIGERATION	18
■ Symbols and Definitions	18
■ Mechanical Components	18
■ Refrigerant Piping	18
■ Operation Set Points	19
■ Off-Cycle Defrost	20
■ Case Thermometer	20
ELECTRICAL	21
■ General	21
MAINTENANCE	22
■ Cleaning	22
■ Under Case Floor Cleaning (NSF)	22

When installing a Reveal Merchandiser® with Doors in a Hybrid™ configuration, refer to both this manual and the Hybrid™ Installation & Operation Manual.

ZERO ZONE WARRANTY

Limited Warranty

Zero Zone, Inc. (Seller) hereby warrants that any products sold are warranted to be free from defects in material and workmanship, under normal use and service for its intended purpose, for a period of one (1) year from the date of original installation (not to exceed 15 months from the date of factory shipment). Zero Zone ChillBrite® LED Lighting carries a 5-year parts warranty. Zero Zone CoolView® Doors carry a 10-year glass pack parts warranty. The obligation under this warranty shall be limited to repairing or exchanging any part, or parts, FOB Factory, which is proven to the satisfaction of the Zero Zone Service Department to be defective. Zero Zone reserves the right to inspect the job site, installation, and reason for failure. This limited warranty does not cover freight, or loss of food or product, including refrigerant loss. Any products sold on an "AS IS" basis shall not be covered by this warranty.

WARRANTY CLAIMS

All claims for labor and parts must be handled directly with Zero Zone.

- Customers are required to contact Zero Zone's Customer Experience Team to coordinate and schedule all warranty repairs. Case model and serial number will be required to schedule any service visits.
- All claims will require case model and serial number and the Package Refrigeration Unit (PRU) model and serial number if applicable.
- If the equipment has surpassed the 12 months from shipment, but not exceeded 15 months from shipment, customer will require proof of installation date.
- Retailer and/or the Refrigeration Contractor must contact Zero Zone's Technical Services Department to assist and confirm the diagnosis PRIOR to any work being started.
- All information related to the component, or system failure will need to be documented and presented to Zero Zone Technical Services Team.
- Claims can be mailed to service.cases@zero-zone.com with model and serial numbers, photos and documentation of the problem(s) including a Zero Zone Work Order #.
- Failure to notify Zero Zone prior to repairing equipment will breach this warranty and will hold it null and void.
- Zero Zone reserves the right to require any failed part covered under warranty to be returned.

WHAT IS NOT COVERED UNDER THIS WARRANTY

Zero Zone's obligation under this warranty is limited to either the repair or replacement of parts, at Zero Zone's discretion. This warranty neither assumes, nor authorizes, any person to assume obligations other than those expressly covered by this warranty.

- **NO CONSEQUENTIAL DAMAGES:** Zero Zone is not responsible for economic loss; profit loss; or special, indirect or consequential damages, including without limitation, loss or damage arising from loss of product, whether or not on account of failure of the refrigeration system.
- **WARRANTY IS NOT TRANSFERABLE:** This warranty is not assignable and applies only in favor of the original purchaser/user and the original installation location. ANY SUCH ASSIGNMENT OR TRANSFER SHALL VOID ALL WARRANTIES, EXPRESS OR IMPLIED.
- **IMPROPER USAGE/INSTALLATION:** Zero Zone assumes no liability for parts or labor coverage for component failure or other damages resulting from improper usage, negligence or installation error. This includes lack of preventative and/or regular maintenance as defined in the Zero Zone Installation & Operational Manual located at www.zero-zone.com.
- **RELOCATION FOR REPAIR:** Zero Zone is not responsible for the cost to move the equipment, or any other fixture or piece of equipment, for any reason from its position of operation on the user's premises to make a warranty repair.
- **NON-OEM PARTS:** OEM parts will be provided under this warranty free of charge to the end-user. Zero Zone is not responsible for defects or damage caused by parts not approved by Zero Zone. Warranty will be voided for any damage caused by a non-OEM part.
- **ALTERATION, NEGLECT, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD:** Zero Zone is not responsible for the repair or replacement of any parts that Zero Zone determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, or damage during transit or installation, fire, flood, or act of God.

- **IMPROPER ELECTRICAL CONNECTIONS FOR ANY REASON:** Zero Zone is not responsible for the repair or replacement of failed or damaged components resulting from incorrect supply voltage, the use of extension cords, low voltage, or unstable supply voltage.
- **NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE: THERE ARE NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, EXCEPT AS SET FORTH IN THIS WARRANTY STATEMENT. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTY AND MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.**

INTRODUCTION

Important User Information

Copyright © 2026 Zero Zone, Inc.

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, Zero Zone, unless it is for the purchaser's personal use.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Zero Zone. Zero Zone does not assume any responsibility for any errors that may appear in this manual. In no event will Zero Zone be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when installing, using, or maintaining Zero Zone products. Zero Zone products should only be installed by qualified, professional refrigeration technicians. If any questions or problems arise, call Zero Zone at 800-247-4496.

Any change to a Zero Zone product made during the installation, start-up, or at any other time must be submitted in writing to Zero Zone for approval and be approved by Zero Zone in writing prior to commission. The product warranty is voided when any unapproved change is made to a Zero Zone product.

Manufacturer

Zero Zone, Inc.

110 N Oakridge Dr • North Prairie, WI 53153 • 800-247-4496 • www.zero-zone.com

Intended Use

Zero Zone products are intended to be installed and used as described in this manual and other related Zero Zone literature, specifications, drawings, and data. All Zero Zone products must be leveled after being installed.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Testing Standards

These display cases were designed and tested using the following industry standards:

- NSF 7 – Commercial Refrigerators and Freezers (ANSI Approved) (equipment certified by NSF)
- NSF 51 – Food Equipment Materials (ANSI Approved) (equipment certified by NSF)
- UL 471 – Commercial Refrigerators and Freezers (ANSI Approved) (equipment certified by ETL)
- ASHRAE Standard 72 – Method of Testing Commercial Refrigerators and Freezers (ANSI Approved)
- AHRI 1200 – Performance Rating of Commercial Refrigerated Display Merchandisers and Storage Cabinets (ANSI Approved)
- DOE Compliant (All U.S. Sales and U.S. Territories)

ASHRAE Standard 72 specifies the test conditions for the equipment. It includes the ambient conditions of 75°F dry bulb and 55% RH. It also specifies the door opening requirements for the performance test. Doors are opened six times in one hour for six seconds. The door opening test period is for eight hours during one 24-hour performance test. As an example, a 5-door case will have 240 door openings during one 24-hour test. Consult the factory if your store exceeds these test conditions.

INTRODUCTION

Display Case Models

The information contained in this manual pertains to the following Zero Zone display cases:

CASE MODEL	DESCRIPTION	DOOR SIZE & TYPE
ORMC83D	83" Standard Multi-Deck with Doors	24" x 69" CoolView® Ultra™ French Doors
ORMC88D	88" Tall Multi-Deck with Doors	24" x 74" CoolView® Ultra™ French Doors

Case Features

Zero Zone produces high quality refrigerated display cases using state-of-the-art components, including a high efficiency evaporator coil. Case features may include:

- Electronic fan motors
- Zero Zone ChillBrite® LED Lighting
- Zero Zone CoolView® Ultra™ Doors
- 90-bar rating available for CO₂ display cases

INSTALLATION & OPERATION

! CAUTION! DO NOT STAND ON TOP OF A REVEAL MERCHANDISER® WITH DOORS. THE TOP OF THE CASE IS NOT DESIGNED TO SUPPORT THE WEIGHT OF A PERSON.

Delivery Inspection

Zero Zone display cases are carefully factory-tested, inspected, and packed to ensure delivery in the best possible condition. The equipment should be unwrapped and checked for damage **immediately** upon delivery. **DAMAGE MUST BE NOTED AT TIME OF DELIVERY, AND ALL CLAIMS FOR DAMAGES MUST BE FILED WITH THE TRANSPORTATION COMPANY, NOT WITH ZERO ZONE.** The carrier will supply necessary report and claim forms. Contact your Zero Zone sales representative or the service department to arrange for replacement parts.

Do not leave, store, or hold case outdoors in direct sunlight or high ambient temperature. With the end panels on, the case is airtight; the inside temperature of the case will increase, and the heat will be unable to escape. This could potentially cause any plastic inside the case to deform or warp.

Note: The installation of the appliance and the refrigerant unit must only be made by the manufacturer's service personnel or suitably qualified person.

BACK-TO-BACK WOOD PLANK REMOVAL INSTRUCTIONS

Note: The wood planks mounted under the back-to-back display cases must be removed before installation.

Remove the 8 screws securing the wooden shipping planks to the display case (4 per side), as shown in **Figure 1**.

Packaging

Each **case** in a lineup is labeled to identify the **lineup** and **joint**. The label uses a two digit number designation, separated by a decimal. The first number indicates the case lineup. The second number indicates the case joint. Case joints begin with the number "1" at the left-most joint in the lineup when looking at the front of the lineup. The first case in the lineup will be labeled on the right end and the second case in the lineup will be labeled on the left end. The numbers on each end to be joined will match (**See Figure 1**).

The *first* case in a lineup (with the right side labeled "x.1") has a packet attached to the shelving that contains touch-up paint. *Every* case in a lineup has a packet attached to the shelving that contains important information about the case and/or lineup and, if applicable, special instructions for installing ordered options.

Bumpers and kickplates are shipped on top of the case. Shelves for the case are tie-wrapped and blocked into the individual cases. Other accessories like drain traps, drain pans, and condensate evaporation pans are shipped in the cases that require the parts.

Materials for joining cases—including caulk, joining bolts, splices, and end filler posts—are shipped in each case to be joined.

The doors are prevented from opening during shipment with the use of door-holding shipping brackets. The brackets are screwed to the top of the case at each door and should be removed when the case is unpacked.

FIGURE 2: Wood Plank Removal

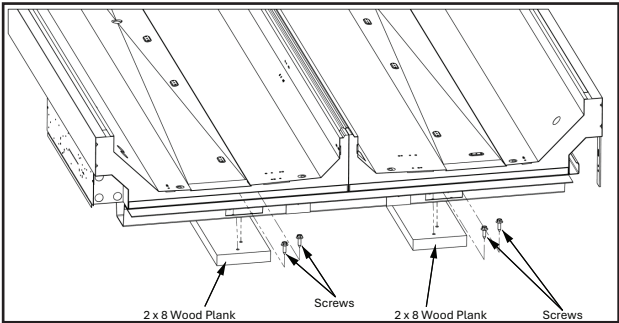


FIGURE 1: Case Label Information



Front of Lineup

INSTALLATION & OPERATION

Location

Zero Zone cases must not be installed in the direct rays of the sun or near a source of radiant heat. Be certain that the floor under the installation is of sufficient strength to prevent sagging. Uneven surfaces will result in reduced performance.

Cases should be set to allow a minimum 3" of space behind the back of the units. This will allow necessary air to circulate behind the display cases and prevent condensation. Higher humidity stores with minimal air circulation require at least a 4" gap. A minimum 2" gap is recommended between cases on end-to-end installations. All minimum spacing requirements may increase if seismic restraints are used.

Building soffits must be set back at least 6" from the front of the case to allow access to electrical wiring on the top of the case.

Moving Cases

Various tools and equipment may be used to move cases including, but not limited to, a forklift, a Johnson bar, a pallet jack, furniture rollers, casters, or a Rol-A-Lift. Be careful to avoid damaging the store flooring. Only certified forklift drivers should use forklifts to move the cases. The case should only be lifted off the floor as high as necessary for transport. The forklift should be driven slowly; avoid abrupt motions or bumps.

- Use the end frame to push/pull the case. For best results, push/pull lower on the end frame. **Do not push/pull on the mullions as this can cause the mullions to bend.**
- When using a Johnson bar, only contact the sheet metal of the bottom foamed panel. **Do not contact the bumper support. Be careful not to pierce the sheet metal with the corner of the Johnson bar.**
- When using a pallet jack or furniture rollers, only place them under the floor panels. **Do not place them under the bumper support or drain pipe as that will crush the components.**
- Cases have steel protective support plates under the end panels (not under insulated dividers) to protect them from Johnson bar damage.

Make sure that a forklift with the proper fork dimensions is available. **Forks must be 48" long, 1 1/2" to 1 3/4" thick, and no more than 4" wide to fit the bases.** Refer to the table below for instructions.

CASE MODEL	INSTRUCTIONS
4ORMCD (2-Door)	Forks must extend 20" to 24" under the case from either end
6ORMCD (3-Door)	Forks must extend 26" to 30" under the case from either end
8ORMCD (4-Door)	Forks must extend 39" to 43" under the case from either end
12ORMCD (6-Door)	Forks must extend 44" to 47" under the case from either end

OPTIONAL BASES

For low shipping height applications, such as 80" tall doorways, Zero Zone offers 1" bases or 1 3/4" bases.

FIGURE 3: Expandable Base

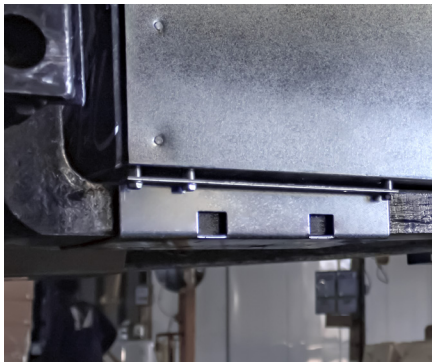


FIGURE 4: Nested Base


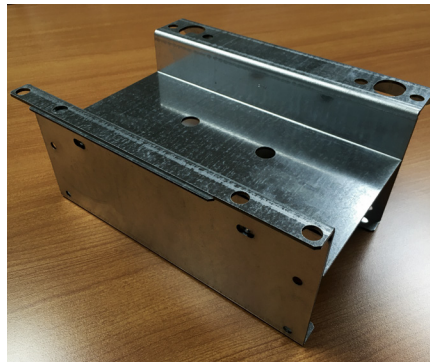


FIGURE 5: Spacer Block

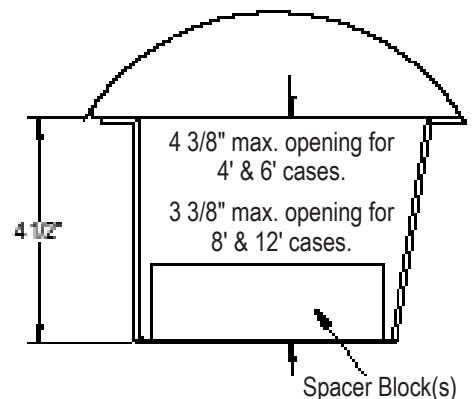

INSTALLATION & OPERATION

- Cases with 1" bases will be shipped on a wooden pallet and are not forkliftable. The case can be removed from the pallet to slide it through the 80" doorway.
- The 1 3/4" bases are expandable to accommodate up to 1 3/4" thick forks (See Figure 3). To use a forklift on the expandable bases, raise the case with a Johnson bar and place wooden blocks under the case, allowing the base to expand enough for forks to be inserted.

Cases with 1" or 1 3/4" bases will be set into nested bases (See Figure 4). The drain elbow will be shipped loose and must be installed using extra thick PVC cement after the case set in place.


Spacer blocks (also called filler blocks) are included in the end bases of 4 and 6-door cases that use bases which are 4 1/2" or taller. These blocks limit the case's forward tilt while it is being lifted by a forklift. The forks should be inserted above the spacer blocks (See Figure 5).

Leveling

FIGURE 6: Measure and Mark Exact Case Outline



FIGURE 7: Mark Floor Level Difference

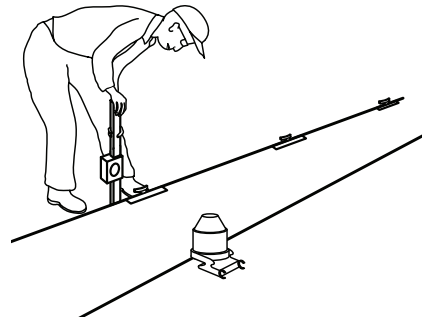

Cases should be set level right to left to allow complete drainage of defrost and condensate water. Since a level floor area is seldom available, the following steps are recommended to ensure a level installation. If your case uses seismic restraints, specific instructions for attaching seismic restraints are included in your document package. Read and understand these instructions before assembling the lineup.

FIGURE 8: Tape Shims on the Floor Under Each Base


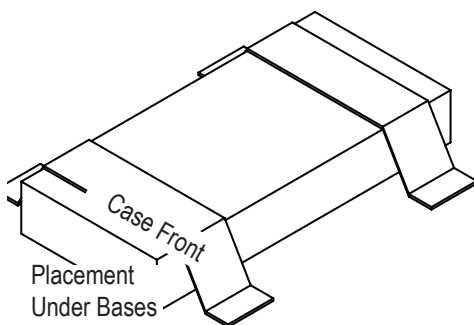


FIGURE 9: Case Squareness

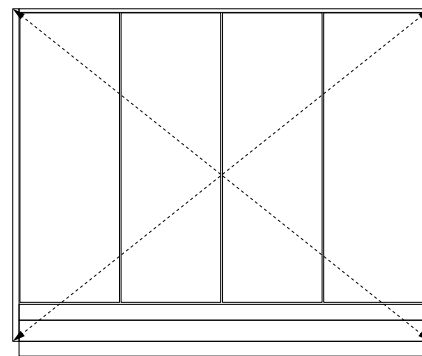


1. Measure off and mark on the floor the exact dimensions of the case lineup (See Figure 6). Refer to the fixture plan or floor plan.
2. Snap a chalk line at the locations for the front and back positions of the bases.
3. Mark locations of all joints, both front and back.
4. Using a laser level or transit, find the highest point along both base position lines. Using the high point as a reference, mark the difference directly on the floor to each base, both front and back (See Figure 7).

INSTALLATION & OPERATION

FIGURE 10: Reveal Merchandiser® Base Locations

Drawings are top views with bases shown under the case. The front of the case is toward the bottom of the page.
Case length does not include end panels (1 1/2" wide each).

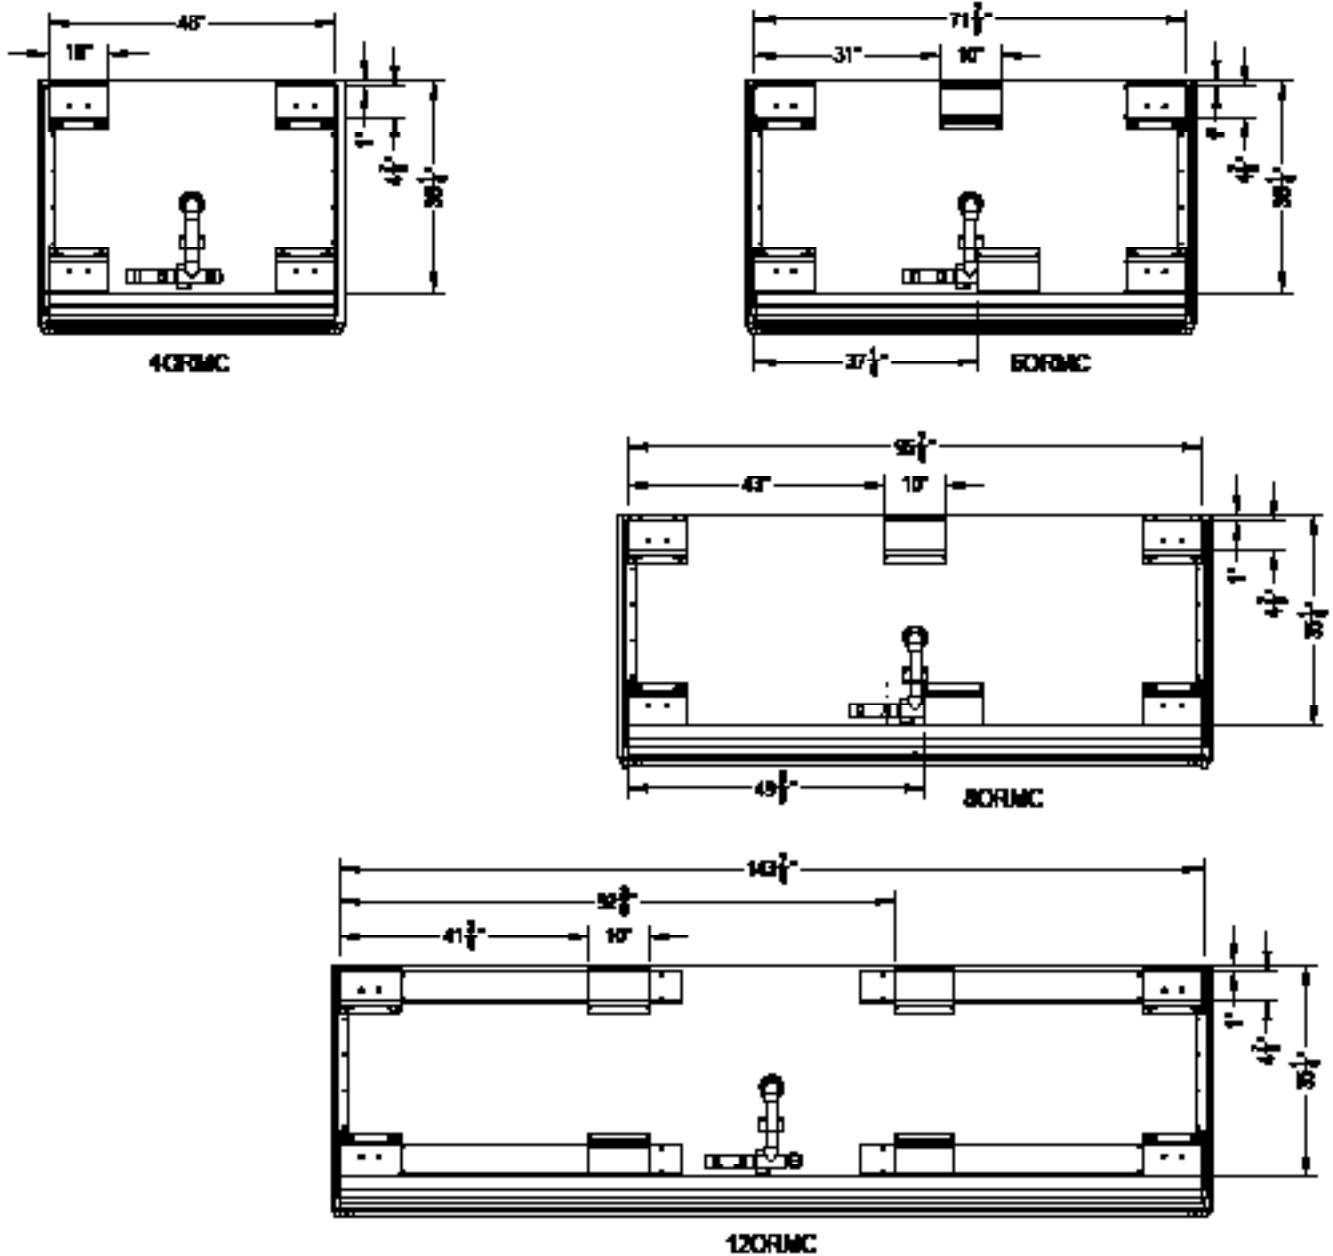

INSTALLATION & OPERATION

5. Place enough shims under each base to equal the highest point. Shims should not extend beyond the front case bases or they will interfere with installing trim. The shims should be oriented to sit under the front and rear bends of each base. Tape all shims in place (See Figure 8). After the case is set, additional shims may need to be added at specific base locations (See Figure 10 on page 8).
6. The case must be leveled front-to-back and side-to-side. Ensure that the case is set square to within 1/8". Measure squareness from top right corner to the bottom left corner, and then again from the top left corner to the bottom right corner. Measurements should be equal. Difference should be no more than 1/8" (See Figure 9).
7. Cases should be set with a slight backward tilt to offset the forward lean of a fully loaded case. We recommend an additional 3/8" of shims be installed under the front bases after the case is leveled.
8. Place additional support shims under any bases with gaps taller than one shim. **Note: Total height of shims should be less than 3/4".**


Lineup Assembly

Zero Zone display cases have been designed for continuous display so that multiple cases may be joined together to create a lineup of any desired length. The lineup will be ready for assembly after removing the packaging material.

A case lineup must be properly aligned, which starts with properly leveling the case (See "Leveling" on page 7). It is crucial to use a laser level to measure the high points in the floor and properly shim each base location.

The bottom of the end panels are protected by steel support plates, which must be unbolted and removed before the lineup is set. There are bolts that go up through the support plates into the underside of the foamed floor.


FIGURE 11: Case Joining Hardware

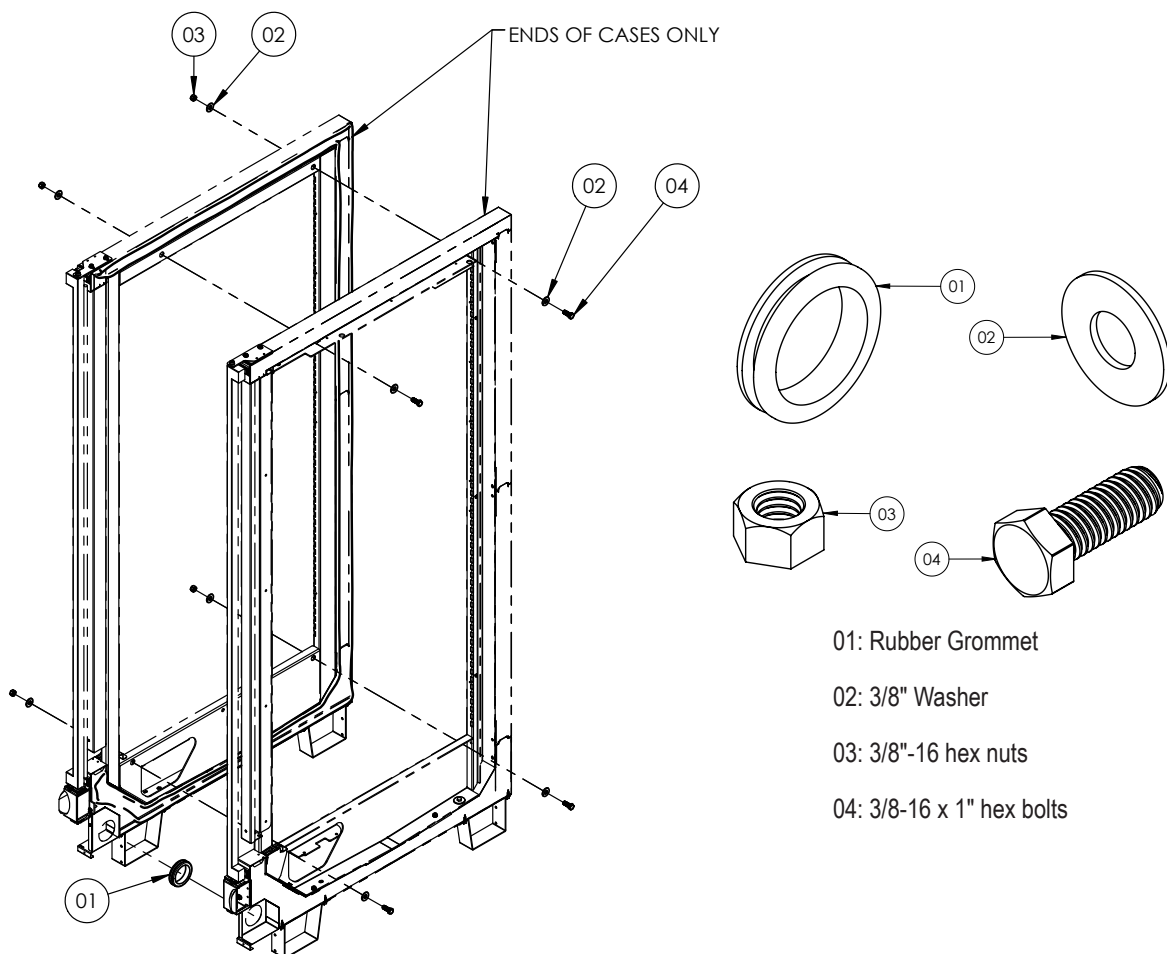

INSTALLATION & OPERATION

Before joining the cases, remove all packaging material on the display case, including any spacer blocks inside the bases. Repeat caulking between each case in the lineup.

FIGURE 12: Case Joint Caulking (Butyl*)

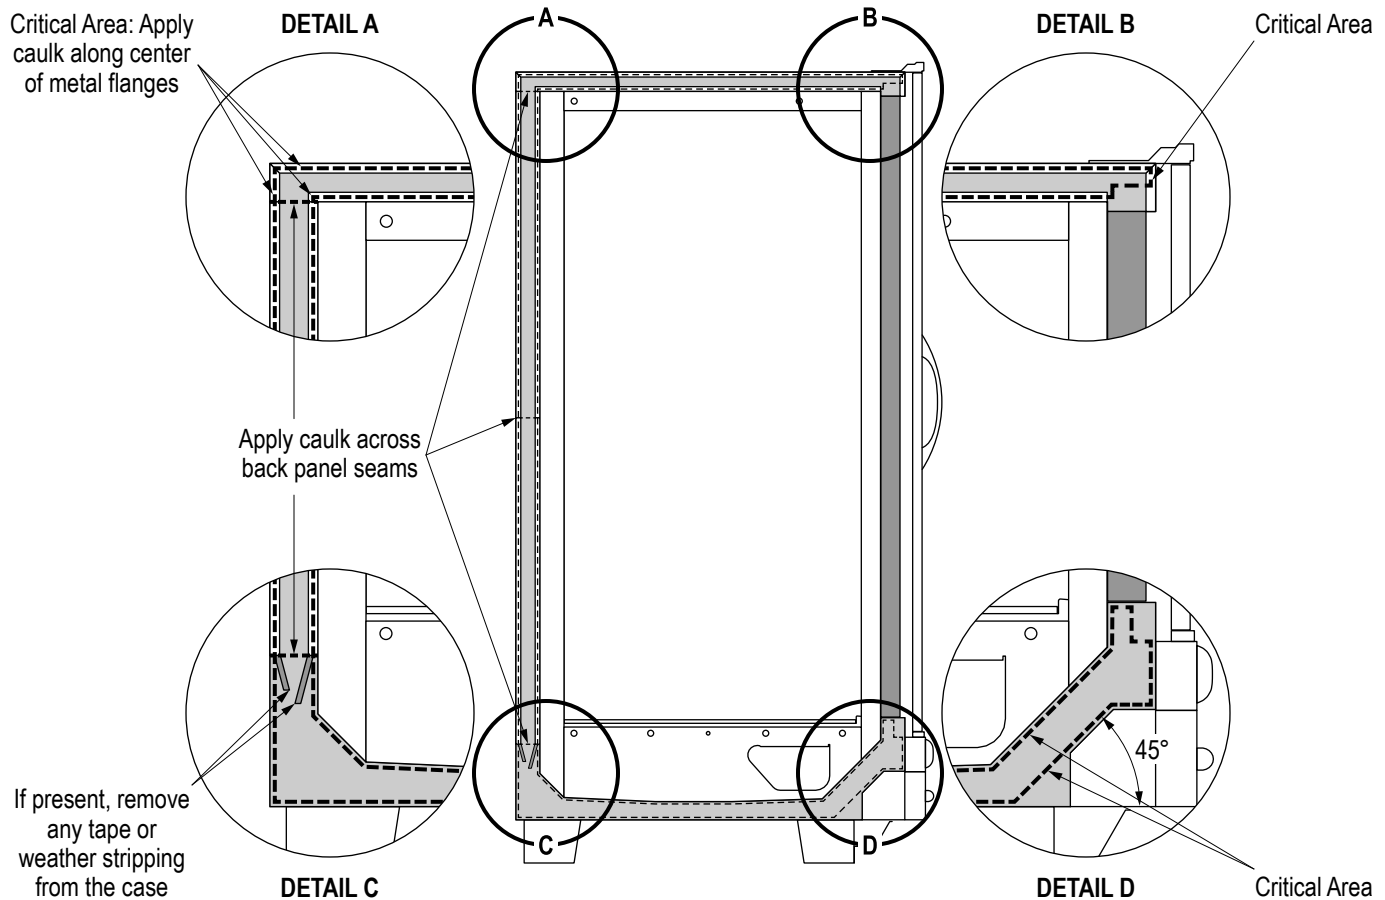

IT IS CRITICAL TO FOLLOW THIS PROCEDURE TO ENSURE CASES ARE PROPERLY SEALED.

SURFACES TO BE CAULKED MUST BE CLEAN, DRY, FREE OF TAPE/ADHESIVE, AND FREE OF FROST (ABOVE 40°F).


Note: Apply Butyl caulk to only one case—not both cases. The caulk will spread out when the cases are pushed together, and excessive caulk may squeeze out of the joint. Wipe away any caulk that squeezes out. Butyl caulk will not mix with silicone sealant (used for NSF sealing), which will affect adhesion of both.

1. Apply 1/2" thick beads of Butyl caulk* along the ceiling, rear wall, and the bottom of the case where indicated by the dashed lines in the drawing. Caulk must be continuous with no gaps. Always apply 2 beads where specified.
2. After cases are joined and tightened, caulk the top and back exterior seams, if accessible, to ensure a tight seal.
3. **See Figure 13 on page 11** for information about NSF compliance sealing with silicone sealant.

***DO NOT APPLY BUTYL CAULK ON SEAFOOD OR BAKERY CASES.** Butyl caulk never cures and emits vapors that affect seafood and bakery products. Recommended alternative caulk: Polyurethane-based (full curing, durable, moisture-activated) or silicone-based (full curing).

INSTALLATION & OPERATION

FIGURE 13: NSF Compliance Sealing (Silicone)

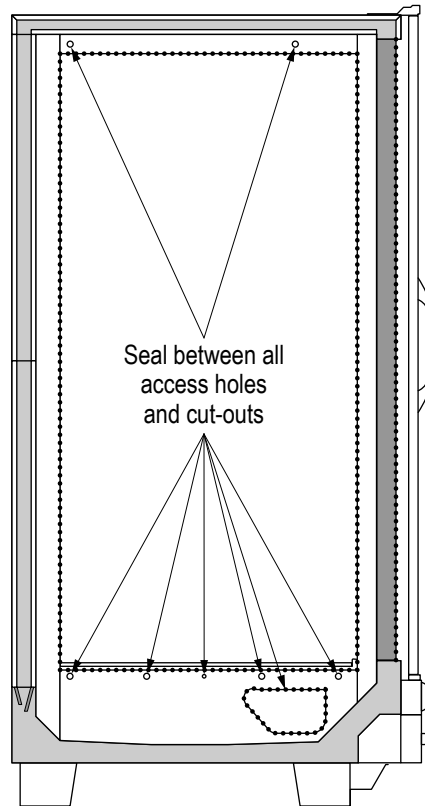

THIS PROCEDURE MUST BE FOLLOWED FOR NSF COMPLIANCE.

SURFACES TO BE SEALED MUST BE CLEAN, DRY, FREE OF BUTYL CAULK, AND FREE OF FROST (ABOVE 40°F).

Note: Cases must be properly caulked and joined before NSF sealing. Wipe away any Butyl caulk that squeezes out of the case joint. Butyl caulk and silicone sealant will not mix, which affects the adhesion of both. See Figure 12 on page 10.

1. Apply silicone-based sealant in small, continuous beads where indicated by the dotted lines in the drawing. Do not thin or feather, as that will affect adhesion.
2. Sealant must be added between cases at case joints, between a case and an end panel, and between all access holes and cut-outs in the case end frame.

INSTALLATION & OPERATION

Reveal to Reveal with Doors Joint Instructions

! CAUTION! THE INSULATED DIVIDER PANEL IS SHIPPED INSTALLED ON THE REVEAL WITH DOORS CASE. DO NOT REMOVE ALL (3) BOLTS NOTED IN FIGURE 13 AT THE SAME TIME! AT ALL TIMES, AT LEAST TWO BOLTS (THROUGH OR SHORT) MUST BE THROUGH THE CASE END FRAME AND INTO THE PANEL TO PREVENT THE PANEL FROM SHIFTING OUT OF POSITION.

Note: The images shown provide reference for the Reveal (open) display case being installed to the left of the Reveal with Doors display case when viewing from the front. The view will be opposite for Reveal (open) display case to be installed to the right of the Reveal with Doors display case.

1. Remove a joint mounting bolt and washer from one location shown in **See Figure 14** and drill a 5/16" hole through the insulated divider panel from outside the Reveal (open) display case.
2. From inside the Reveal with Doors display case, push the removed bolt through it's original hole in the end frame and into the hole drilled in step 1.
3. Repeat steps 1 and 2 for the remaining two bolts, then proceed to step 4.
4. After the Reveal with Doors display case is set, remove the bolts reinserted per step 2 by pushing the supplied through bolts (with washers) into the drilled holes from inside the Reveal (open) display case one at a time (**See Figure 16**). Inside the Reveal with Doors display case, install nuts and washers on all (3) through bolts and torque the nuts to 60 lbs-in. Washers **must** be used under each bolt head and under each nut.
5. From inside the Reveal (open) display case, install short (removed) bolts and washers in the locations indicated in **Figure 15**. Washers **must** be used under each bolt head. Torque the bolts to 60 lbs-in.

FIGURE 15: Short Bolt Installation

View of right end from inside Reveal with Doors display case

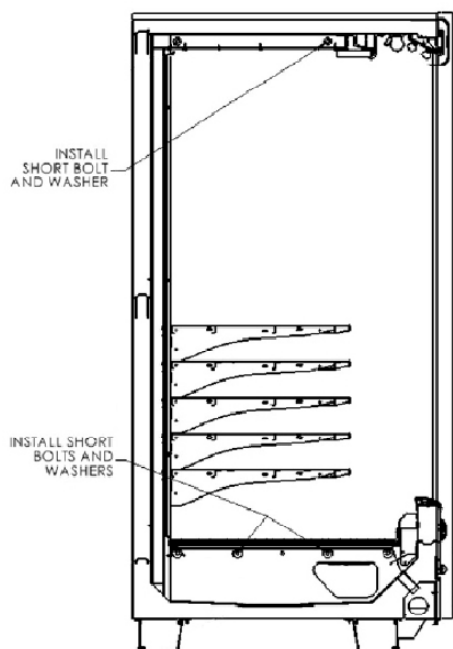


FIGURE 14: Drill Locations

View of left end from inside Reveal with Doors display case


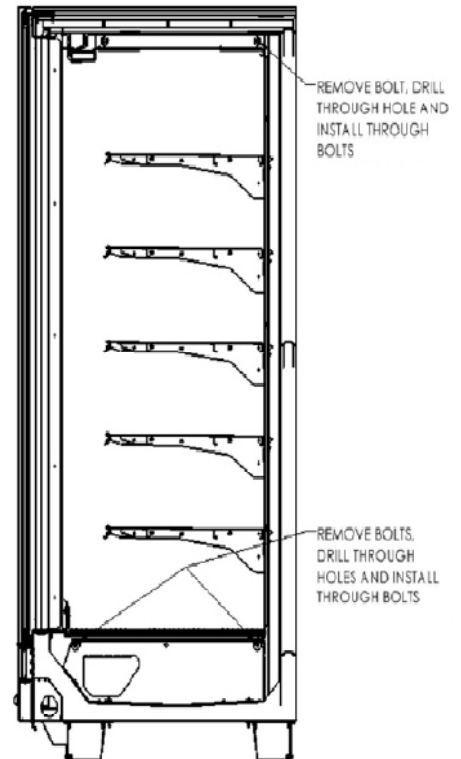


FIGURE 16: Through Bolt Locations

Exploded view of right end of Reveal display case

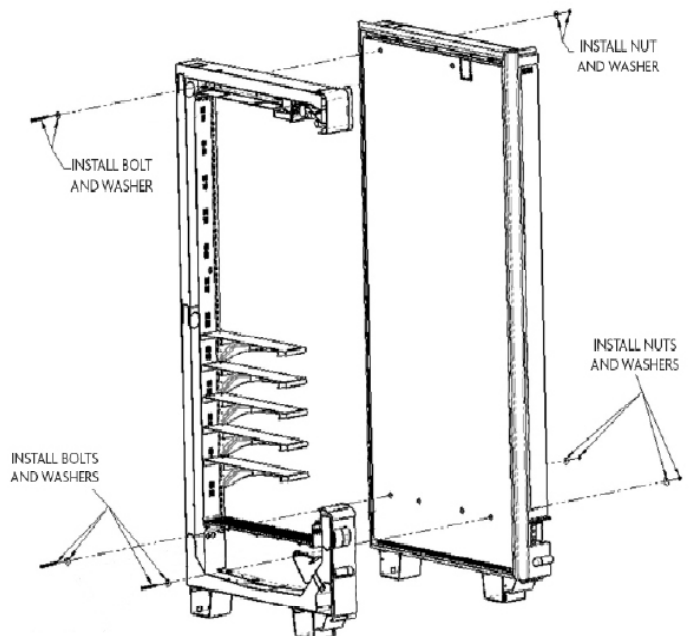

INSTALLATION & OPERATION

Door Leveling (Door Sag/Sawtooth)

Doors must be leveled before the bumper and kickplate are installed (See Figure 17).

For French-swing doors, there should be a $7/16"$ gap between doors at the handle side and a $3/8"$ at the hinge side. To set the proper gaps, loosen the screws holding the top or bottom door mounting plates, then shift the door.

BOTTOM MOUNTING PLATE

To move the bottom mounting plate, the center locking screw (located behind the bumper) must be loosened.

1. To remove the bumper, use a flathead screwdriver to pry it up from the bottom. Lift the edge, and then slide the screwdriver down the entire length of the bumper to loosen it. Once the bottom edge is disconnected, use a hammer to tap the screwdriver upwards and disengage the bumper from the upper track. Remove the bumper.
2. Loosen the center locking screw by 2 turns, accessed through the hole in the bumper support plate (See Figure 18). This will allow the bottom mounting plate to shift. **Do not remove the center locking screw.**
3. Tap the door's aluminum extrusion with a rubber mallet to shift the door. Once the door is in position, retighten the center locking screw.

TOP MOUNTING PLATE

The top mounting plate is located on top of the case behind the top trim.

1. Loosen all 3 screws that secure the slotted plate by 2 turns (See Figure 19). **Do not remove the screws.**
2. Tap the door's aluminum extrusion with a rubber mallet to shift the door. Once the door is in position, retighten all screws.

Drain

The 1.5" PVC drain line exits from the bottom center of the case. The lateral runs of drain pipe should be installed through the bases, as needed (See Figure 20). There is no room in front of the base for the drain pipe because the kickplate installs directly to the front of the bases.

Install the drain tee to the outlet pipe and a drain trap to the tee. Plug the open end of the tee using the clean-out plug supplied with the drain trap kit. The drain line must be pitched away from the case. The tee, drain trap, and plug are supplied with the case. The drain trap must be level. The drain trap should be primed with water after installation. The drain line must be pitched away from the case enough to ensure proper drainage, typically at least $1/4"$ per foot. Consult your local codes for minimum requirements.

The forward drain section, tee, and "R" trap are shipped loose for field installation.

FIGURE 17: Properly Leveled Doors



FIGURE 18: Center Locking Screw

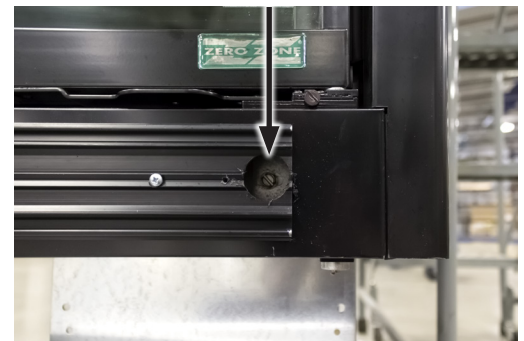


FIGURE 19: Top Mounting Plate

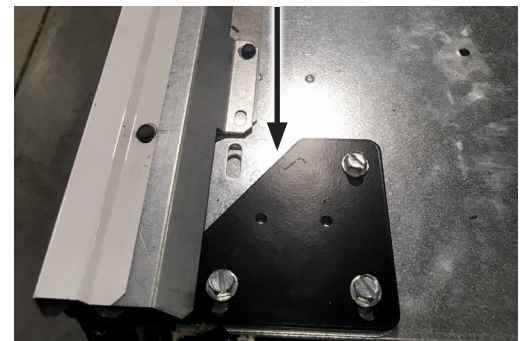


FIGURE 20: Drain Installation



INSTALLATION & OPERATION

Kickplates


Each case is shipped with a front kickplate. Cases with end panels are shipped with 1 side kickplate per end panel. Cases that join together are shipped with a kickplate splice.

Front and side kickplates are attached to the case bases using Tinnerman clips. Position the front kickplate so the flange is on top and facing outward. The screw (supplied) goes through the kickplate and into the Tinnerman clip (See Figure 21).

1. Install Tinnerman clips at each base.
2. Install side kickplate.
3. Install front kickplate.
4. Insert fasteners to secure kickplates.

There is a natural gap between the top of the kickplate and the underside of the Reveal Merchandiser® that allows airflow of 20 CFM/foot. If more airflow is required, contact the factory to order optional louvered kickplates (provides 60 CFM/foot).

FIGURE 21: Kickplate Installation

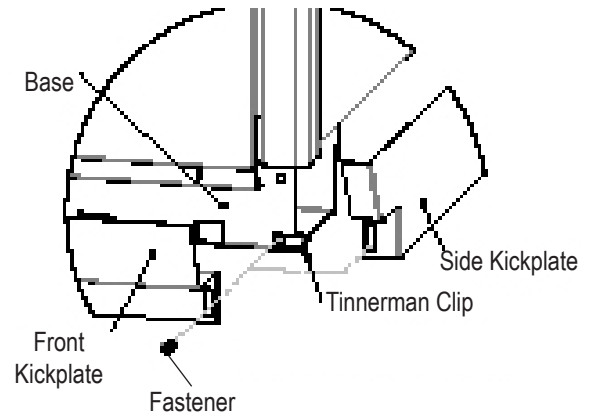


Bumper

Cases are supplied with a protective bumper shipped loose on top of each case. The steel bumper support and snap track are factory-installed on the front of the case. The bumper may need trimming before snapping it onto the snap track. Door leveling must be completed before attaching the bumper (See "Door Leveling (Door Sag/Sawtooth)" on page 13).

Top Trim

Top trim is factory installed to hide the door hardware located on the top exterior of the case. The top trim is held up by end and center support braces. The center support brace also acts as a joint support brace (See Figure 22). The joint support brace will be shipped loose. After the cases are joined together, add the support brace under the top trim and attach it to both cases using the existing holes.

FIGURE 22: Top Trim Center/Joint Support Brace

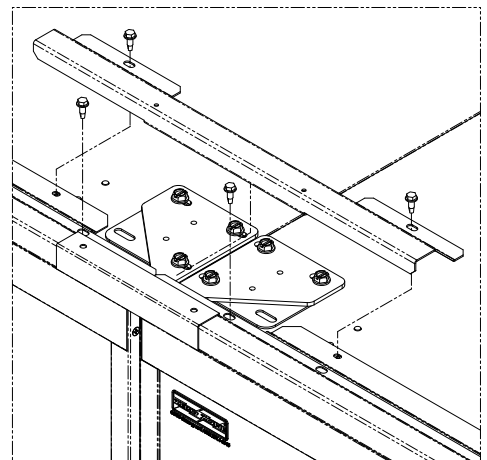

CoolView® Doors

Door leveling must be completed before attaching the bumper (See "Door Leveling (Door Sag/Sawtooth)" on page 13).

COOLARC™ DOOR HANDLES

The CoolArc™ door handle is attached to the glass surface of the door by an industrial-grade adhesive.

INSTALLATION & OPERATION

ADJUSTING DOOR CLOSER/POWER CARTRIDGE TENSION

The power cartridge is a spring cartridge that automatically closes the door. It is located on the hinge-side of the door sill. A square pin protruding from the top of the power cartridge fits into a square opening on the door, transferring the spring tension to the door. This means that the square pin must be aligned with the square opening when installing a door. An adjustment screw on the front of the power cartridge can be used to increase or decrease tension.

1. Open the door to observe current door tension. A properly tensioned door will close itself gently and not swing open.
2. Use a flathead screwdriver to turn the door tension screw (**See Figure 23**). **Do not use power tools; a screwdriver allows for more control.**
3. To increase tension, hold the door open 2" and turn the screw counterclockwise until the door begins to close. After it closes, increase tension by 2 more turns.
4. To decrease tension, turn the screw clockwise.

The screws holding the door closer are secured with removable thread locking compound; extra force will be necessary to remove them.

HOLD-OPEN BRACKET

CoolView® doors are self-closing, and closing tension increases as the door opens wider. The hold-open bracket keeps the door open when engaged, which is useful for stocking shelves or case maintenance. To engage the hold-open bracket, open the door to 90° until it clicks. Closing the door to about 80° will release tension on the door, and it will self close again.

DOOR GASKET

Upper and lower horizontal magnetized gaskets run the length of each case. The gaskets mate up to steel plates installed at the top and bottom of each door. A sweeper gasket runs along the handle-side of each door. A specialized gasket runs along the hinge-side of left-hinged doors, with very few exceptions.

INSTALLING A DOOR

! CAUTION! THE DOORS ARE HEAVY. IT IS RECOMMENDED THAT TWO INDIVIDUALS COMPLETE THE DOOR INSTALLATION TO PREVENT INJURY TO PERSONNEL AND DAMAGE TO THE DOOR.

! CAUTION! FOR SAFETY, DO NOT LIFT THE DOOR BY THE HANDLE.

1. Align the door hinge bracket on the bottom of the door with the square pin on the power cartridge (**See Figure 24**).
2. Tilt the door into place, then install the door shoulder bolt and bushing on top of the hinge side of the door (**See Figure 25 on page 16**).
3. Install the hold-open bracket located next to the power cartridge on the door sill.
4. Perform the **"Adjusting Door Closer/Power Cartridge Tension" procedure on page 15**.

FIGURE 23: Door Tension Screw


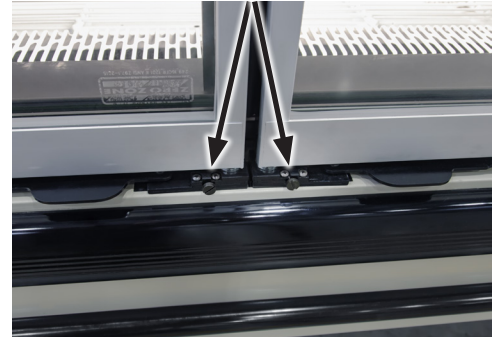


FIGURE 24: Door Hinge Bracket and Power Cartridge
View of Bottom of Door

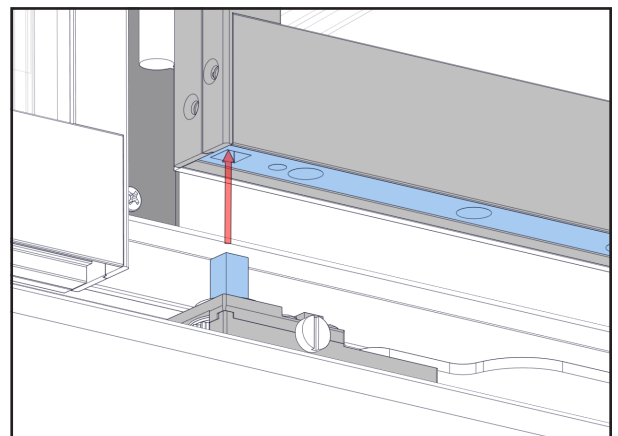

INSTALLATION & OPERATION

REMOVING A DOOR


! CAUTION! THE DOORS ARE HEAVY. IT IS RECOMMENDED THAT TWO INDIVIDUALS COMPLETE THE DOOR REMOVAL TO PREVENT INJURY TO PERSONNEL AND DAMAGE TO THE DOOR.

! CAUTION! FOR SAFETY, DO NOT LIFT THE DOOR BY THE HANDLE.

Note: *The top trim piece must be removed to access the door shoulder bolt.*

1. Turn door tension screw clockwise until door does not close on its own. This removes tension between the door and power cartridge.
2. Remove the bolt connecting the hold-open bracket to the door. The hold-open bracket is located next to the power cartridge and connects to the bottom of the door.
3. Remove shoulder bolt and bushing on the top of the hinge-side of the door (**See Figure 25**). Only remove the bolt holding the door; do not remove the bolts attached to the case.
4. Tilt the door away from the case. **Note: The door is heavy. Be prepared to hold the weight of the door.**
5. Lift the door up and clear of the power cartridge and set down carefully.

FIGURE 25: Door Shoulder Bolt

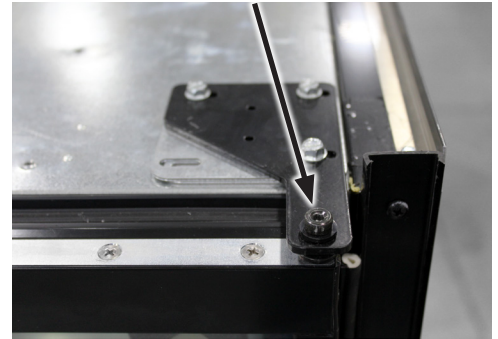

Shelves & Stocking Product

Shelf location may be adjusted in 1" vertical increments in any position for best display advantage. Make sure the shelf brackets are securely seated before placing any product on the shelf. The standard shelves may be tilted down at a 10° angle. Optional shelf assemblies are available that may be tilted at 5°, 10°, or 15° angle.

The case may be stocked with product after it has operated at least 24 hours with correct case temperature and proper control operation. When stocking the shelves, leave at least a 1" gap between the product and the shelf above, which allows air to circulate over and around the product. Product should not extend beyond the front of the shelves or bottom wire rack. **Note: Do not place product on the return air grille. Do not exceed shelf load capacity. Do not stand on the case when stocking or adjusting shelves.**

To unassemble a shelf, insert a putty knife between the side of the shelf and the shelf bracket. Pry the pieces apart to disengage the bracket.

Shelves can be ordered with 1", 2", or 3" acrylic product stops, which fit into aluminum price tag molding. Slide the product stop into the price tag molding and push it down to the bottom of the channel (**See Figure 26**). The channel of the price tag molding may need to be pried open with a screwdriver, but the product stop should slide in easily once started.

The display case can be fitted with standard duty or heavy duty shelves. Standard duty shelves have a maximum capacity of 175 lbs at a 0° shelf angle. Heavy duty shelves have a maximum capacity of >250 lbs at a 0° shelf angle. **See Figure 27 on page 17** to determine heavy duty shelf capacity.

Shelf load capacity is determined by shelf angle, shelf width, shelf depth, bracket position, and the number of shelf supports

FIGURE 26: Acrylic Product Stops (1" Shown)



Product stop fits into the price tag molding.

INSTALLATION & OPERATION


To determine heavy duty shelf capacity, take the following steps:

1. Measure the width and depth of case shelves.
2. Count the number of supports below shelf (**See Figure 28 - Right Side**).
3. Determine shelf bracket position (**See Figure 28 - Left Side**).
4. Measure shelf angle (**See Figure 28 - Left Side**).
5. Refer to **See Figure 27** with the information collected in steps 1-4 to determine maximum shelf capacity.

FIGURE 27: Shelf Load Capacities

SHELF WIDTH	SHELF DEPTH	# OF SUPPORTS BELOW SHELF	SHELF BRACKET POSITION	CAPACITY AT 0°	CAPACITY AT 5°	CAPACITY AT 10°	CAPACITY AT 15°
36" 48"	10" - 27"	2 - 4	2	350 lbs	N/A	150 lbs	N/A
			4	350 lbs	250 lbs	150 lbs	100 lbs
36" 48"	22" 24"	3	1	500 lbs	N/A	N/A	N/A

FIGURE 28: Shelf Angling and Supports

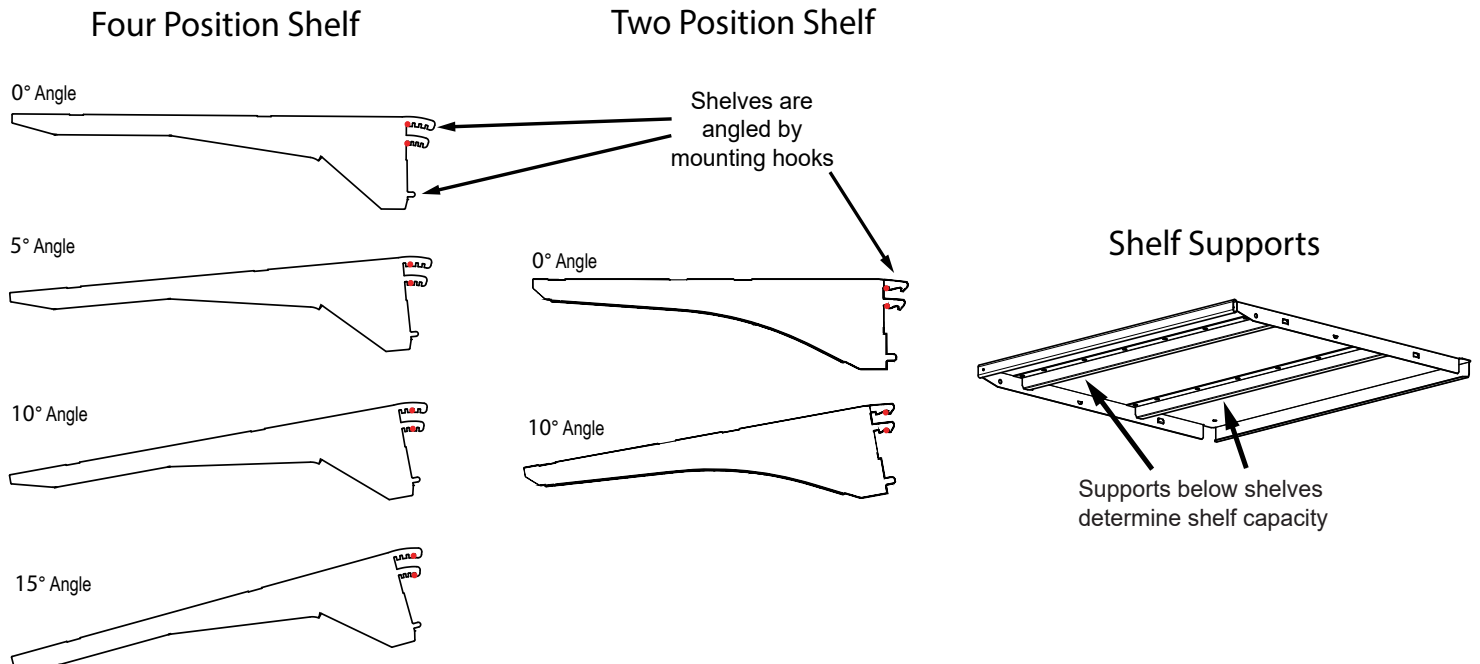

REFRIGERATION

! WARNING! REFRIGERATION SYSTEMS USING R-744 (CO₂) ARE UNDER HIGH PRESSURE. DO NOT TAMPER WITH THE SYSTEM. CONTACT QUALIFIED SERVICE PERSONAL BEFORE DISPOSAL.

Symbols and Definitions



Symbol ISO 70000-1701 (2004-01)

Pressure

Mechanical Components

FIGURE 29: Fans and Case-to-Case Piping



FIGURE 30: Expansion Valve Next to Evaporator Coil



Air is circulated through the display case by evaporator fans, which are located below the deck pans in the bottom of the case (**See Figure 29**). Air is drawn through the front return air grill and discharged out of the honeycomb at the top.

The evaporator coil, located at the rear bottom of the case, can be inspected by removing the deck pans. Unless otherwise specified, the thermostatic expansion valve (TXV) is mounted to the evaporator coil (**See Figure 30**). Superheat should be adjusted to 6-10°F. Contact Zero Zone for high-glide refrigerants.

Glycol cases typically have a balance valve located in the outlet line inside of the case. If a stop solenoid is provided, it will also be located in the outlet line. Schrader valves are provided inside the case on the right-hand side of the coil for venting and draining the system.

Refrigerant Piping

The display case must be connected to a refrigeration unit using the same refrigerant indicated on the display case serial tag.

Correct refrigeration line sizing and industry standard installation practices are essential for proper system operation. Zero Zone offers many refrigerant choices. We recommend using the Sporlan Virtual Engineer Toolbox to calculate sizing for liquid, suction, and discharge lines: <https://solutions.parker.com/sporlanvirtualengineer>. Go to the link, select the line type, and then enter the information required to calculate the recommended line size. Toggle between metric or imperial units as needed.

REFRIGERATION

After connections have been made, the refrigeration access hole in the case must be sealed completely with an aerosol-dispensed urethane insulation or equivalent (example: *Great Stuff*). Penetrations made in sheet metal baffles should also be sealed.

Cases will be equipped with a liquid-line filter drier by default.

FIGURE 31: Case Temperature Internal Control Options

SETTING	ORMC83D & ORMC88D		
Evaporator Temp	28°F		
Return Air Temperature Set Point	30°F		
Return Air Temperature Differential	4°F		
Discharge Air Temperature Set Point	33°F		
Discharge Air Temperature Differential	4°F		
SETTING	R-404A	R-448A	Sat. Temp
Condensing Unit Cut-In	74 psig	62 psig	33°F
Condensing Unit Cut-Out	62 psig	51 psig	25°F
Note: Set points based on superheat of 6-8°F. For high-glide refrigerants, use dew point for unit sizing. Adjust evaporator pressure as needed to maintain discharge air temperature. To receive the full benefit of high-glide refrigerant properties, the superheat may need to be lowered to 4-6°F. Contact Zero Zone with questions.			

Operation Set Points

Refer to the case spec sheet for Btu/h requirements and electrical requirements. Operate the case at the proper settings to maintain correct product temperature, per food safety regulations ([See Figure 31 on page 19](#)). **Note: Set points are based on flat shelves. Alternate shelving—such as angled or tiered shelving, peg hooks, or produce inserts—may require lower operating temperatures.**

FIGURE 32: Defrost Settings

SETTING	ORMC83D & ORMC88D
Defrost Type	Off-Cycle
Frequency	2 Per Day
Duration	30 Minutes

REFRIGERATION

Off-Cycle Defrost

Periodic defrosting is necessary to keep the evaporator coil free of frost. **See Figure 32** for defrost settings.

During off-cycle defrost, refrigerant is stopped either by stopping the compressor or by closing the liquid line solenoid valve and allowing the compressor to pump down. The fans and lights remain on during off-cycle defrost.

If temperature termination is selected, set the termination temperature for 45°F for discharge air and coil temperature. **Note: Opening the doors, stocking product, or shopping during off-cycle defrost may cause premature defrost termination.**

Case Thermometer

An NSF thermometer is shipped loose and should be installed in the warmest product location as required by NSF. Specific field installation instructions are packaged with the NSF thermometer.

ELECTRICAL

General

! CAUTION! DISCONNECT POWER TO THE CASE BEFORE SERVICING ELECTRICAL COMPONENTS TO AVOID PERSONAL INJURY AND DAMAGE TO THE UNIT.

! CAUTION! A DISCONNECT NEEDS TO BE INCORPORATED IN THE FIXED WIRING.

Cases will have 2 electrical circuits for the fan circuit and the lighting circuit.

The electrical enclosure is located behind the lower trim on the right side of the case. The enclosure includes the power connection and power supplies for the LED light sticks. The light switch is located on the front right side of the false ceiling (See Figure 33). When supplying electrical power to the case, connect to the supplied black and white wires and wire nuts inside the electrical enclosure. A ground connection should also be connected inside the electrical enclosure. See Figure 34 for typical wiring diagram with off-cycle defrost.

Note: Always refer to the wiring diagram shipped with the case.

Optional top electrical will be located in a junction box on top of the case.

External wiring should be sized according to the amperage rating stamped on the serial tag, which is located on the ceiling inside the left-hand door. Typical electrical values are shown on specification sheets that are available online. All internal wiring has been completed at the factory.


All wiring must comply with the National Electrical Code (NEC) and all local codes. After installing the equipment, correct operation of the electrical circuits, controls, and defrost controls should be verified. All operating voltages and amperages should be measured and recorded. Display cases that do not include a remote disconnect must be field installed with a remote disconnect in accordance with NFPA 7.0 of the National Electric Code.

In coolers, 1 sensor bulb is factory installed. Temperature probe wires are white (common) and green (supply). The temperature probe (discharge air) is located in the false ceiling.

FIGURE 33: Light Switch



FIGURE 34: Sample Wiring Diagram

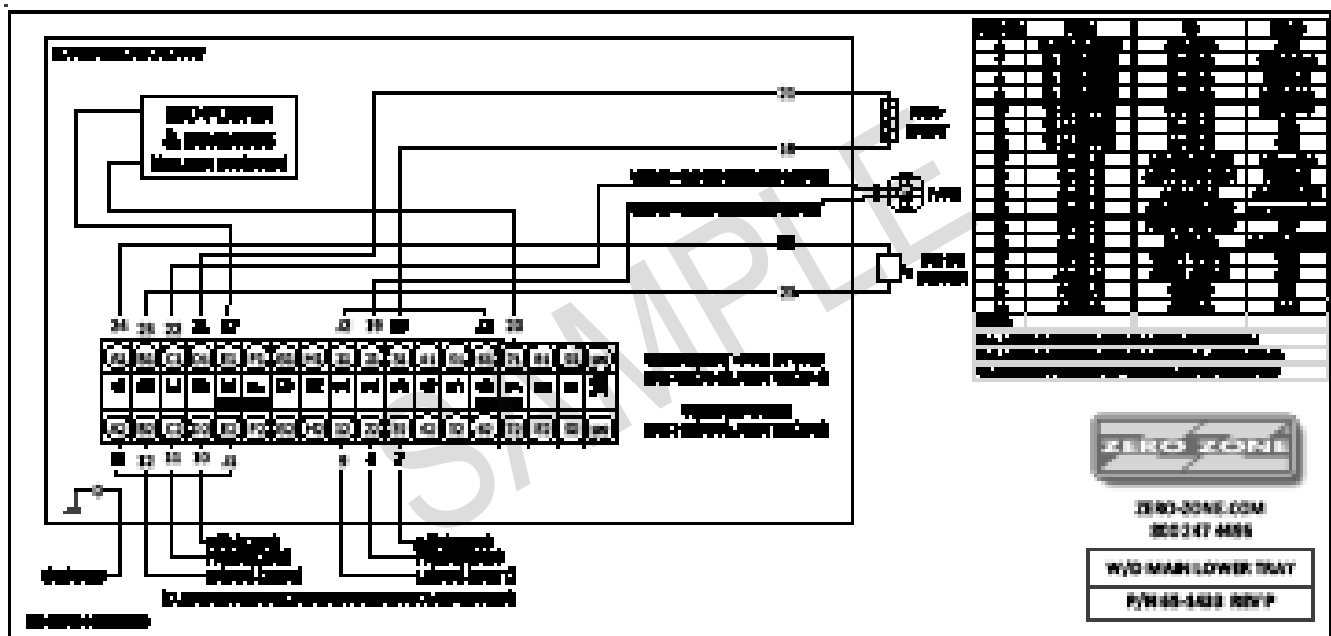

MAINTENANCE

Cleaning

Although each Zero Zone display case is thoroughly cleaned before shipping, the cases should be thoroughly cleaned again before start-up and routinely thereafter to maintain a clean appearance. With just a few minutes of cleaning each week, the case will remain in top condition.

1. Do not use high-pressure water or steam to clean the interior or any components.
2. Do not wash fan motors. A damp cloth can be used to wipe the fan motors. Cover the fan motors with a plastic bag when washing the case.
3. Wipe out the case interior using mild detergent and warm water (never an abrasive cleaner).
4. Clean all glass doors, windowed ends, and mirrors using glass cleaner. Cleaning interior glass reduces fogging and increases visibility. If your doors have an anti-fog coating, do not use any cleaning products containing silicone.
5. Internal components can be cleaned after removing coil covers, access panels, and sheet metal components. Use a mild detergent and warm water or a mild sanitizer.
6. If the case is equipped with a condensate pan and pump, the drain should be blocked before washing coils. Water can be removed with a shop vacuum.
7. Coils may be cleaned with a garden hose or pails of water. If the case is equipped with a condensate pan and pump, cases should be cleaned with a minimal amount of water so the evaporator, pump, and drain pans do not get overfilled.
8. The case drain should frequently be cleaned of debris to prevent clogging. If water is not draining, check to see if the drain is clogged. A clean-out tee can be accessed from the front of the case behind the kickplate.

UNDER CASE FLOOR CLEANING (NSF)

The floor under your Zero Zone display case can be cleaned by following these steps:

1. Remove the fasteners attaching the kickplate to the case. The fasteners are accessed from the front of the unit.
2. With the kickplates removed, vacuum under the case to remove any dirt, debris, and dust build-up.
3. Mop under the unit using non-abrasive floor cleaner and warm water.
4. When finished mopping, squeegee any remaining water under the display unit to the store floor drains to speed up the drying process. Replace the kickplates when the floor has dried.



For other technical support, please refer to
the Technical Resources page at:

WWW.ZERO-ZONE.COM

or contact the Zero Zone Service Department at:

800-247-4496

All specifications subject to change without notice.

